

Only registered devices get updates over the air. The update should occur automatically (wirelessly). Make sure you have wireless connectivity (Airplane mode should be OFF). Go to "My B&N Library" & press "Check for new B&N content". Your nook will proceed with the update.

You can also "side-load" the update via your computer. [MANUALLY DOWNLOAD UPDATE HERE](#), Just put it in the root folder of your nook. Eject your drive(s) and it will do the update! If you have problems make sure the file name doesn't have a -2 or -1 added to it by your browser. It should be `singed_bravo_update.dat`!