

Two things seem to cause this. The first is a dirty screen. Put the nookColor to sleep and clean it with a soft dry cloth. The second thing is the screen input is behind and picking up old screen taps. If this is the case put the nookColor to sleep and power it back on.